PREMIER®

MANUAL DE INSTRUCCIONES
EXPRIMIDOR DE JUGOS
ED-4035

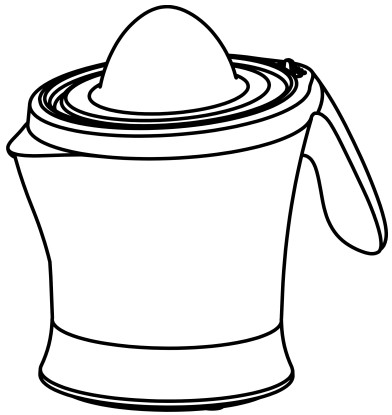

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

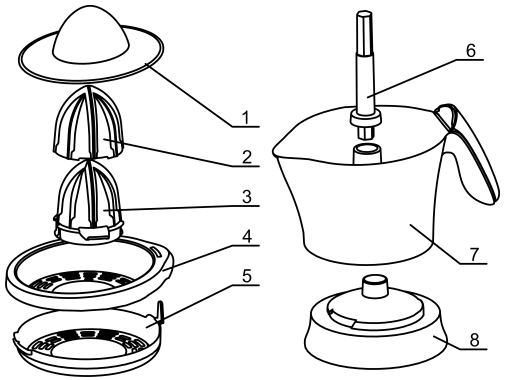

1. Cubierta protectora
2. Primer cono
3. Segundo cono
4. Filtro
5. Filtro ajustable
6. Eje de transmisión
7. Jarra
8. Base del motor

INSTRUCCIONES DE SEGURIDAD

- Lea este manual cuidadosamente antes de usar la unidad, y consérvelo para futuras referencias.
- Limpie las partes de la unidad que entrarán en contacto con los alimentos antes de usar la unidad.
- No use la unidad si el cable de poder se encuentra dañado.
- Asegúrese que el voltaje del área es el adecuado para la unidad antes de conectarla al tomacorriente.
- No altere el enchufe de la unidad, y asegúrese que quede correctamente insertado en el tomacorriente.
- Evite usar o guardar la unidad en exteriores.
- No use la unidad si esta dañada de alguna manera o si tiene fugas.
- No fuerce el cable de conexión eléctrica. No use el cable de energía para levantar, arrastrar o desconectar la unidad.
- Asegúrese que el cable no este enredado.
- No toque el cable de energía con las manos mojadas
- Esta unidad no ha sido diseñada para personas con capacidad física, mental o sensorial reducida (Incluyendo niños) o falta de experiencia o conocimiento.
- Los niños deben ser supervisados para evitar que jueguen con la unidad.
- Si el cable de energía se daña, debe ser reemplazado de inmediato por personal técnico calificado.

USO Y CUIDADO

1. Desenrolle el cable de energía de la unidad completamente antes de su uso.
2. No encienda la unidad de nuevo mientras este en uso o conectada a la red eléctrica.
3. Desconecte la unidad del tomacorriente cuando no la este usando y antes de remover sus piezas para limpiarlas.
4. Esta unidad es solo para uso doméstico, no para uso profesional o industrial.
5. La unidad debe ser guardada fuera del alcance de los niños.
6. Almacene la unidad en una posición vertical, alejada del polvo, la humedad y los rayos directos del sol.
7. No deje la unidad desatendida mientras este en uso.
8. No nos hacemos responsable por el mal uso o el no seguimiento de este manual de usuario.

INSTRUCCIONES DE USO

1. Conecte la unidad al tomacorriente.
2. Corte las frutas que desee exprimir a la mitad
3. Coloque un vaso en la salida de jugo de la unidad.
4. Encienda la unidad presionando hacia abajo el cono.
5. Para detener la unidad, simplemente deje de presionar el cono.
6. Remueva los conos y el filtro para vaciar el jugo.
7. Sirva el jugo en el baso directamente.
8. Si procesa grandes cantidades de fruta, limpie el filtro periódicamente y remueva el exceso de pulpa.

LIMPIEZA

Desconecte la unidad del tomacorriente antes de iniciar su limpieza.
Con excepción de la base del motor y el enchufe, limpie todas las partes de la unidad con detergente y agua
No sumerja la unidad en agua o en cualquier otro liquido.
Se recomienda que limpie la unidad periódicamente.
Las siguientes partes pueden ser limpiadas con agua y jabón: Cubierta protectora, cono, filtro, jarra.

DIAGRAMA DE CIRCUITOS

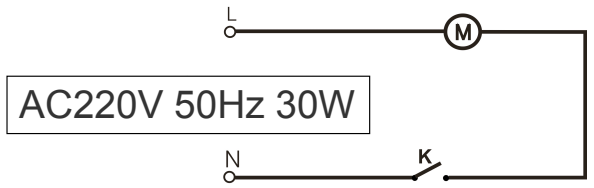

PREMIER®

INSTRUCTION MANUAL
CITRUS JUICER
ED-4035

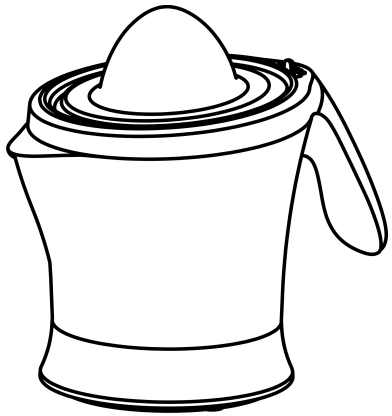

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Description

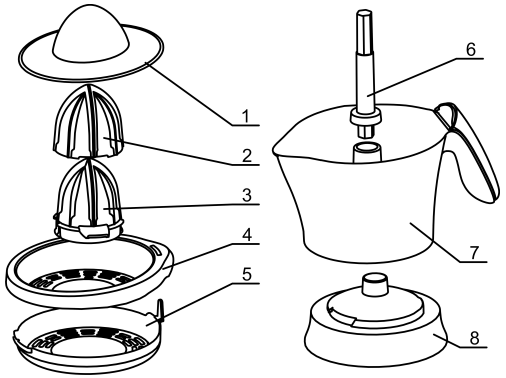

1. Protective cover
2. The first Cone
3 .The second Cone
4 .Filter
5. Adjust filter
6. Transmission axes
7. Jug
8. Motor base

Safety advice and cautions

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.
- Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section before use.

Electric safety

- Do not use the appliance if the cable or plug is damaged.
- Ensure that the voltage indicated on the nameplate matches the mains voltage before plugging in the appliance.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Do not use or store the appliance outdoors.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- Do not force the electrical connection wire. Never use the electric wire to lift up, carry or unplug the appliance.
- Ensure that the electric cable does not get trapped or tangled.
- Check the state of the electric cable. Damaged or knotted cables increase the risk of electric shock.
- Do not touch the plug with wet hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or

mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Use and care:

1) Fully unroll the appliance's power cable before each use.
2) Do not turn the appliance over while it is in use or connected to the mains.
3) Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.
4) This appliance is for household use only, not professional or industrial use.
5) This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
6) This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.
7) This appliance should be stored out of reach of children and/or the disabled.
8) Do not store the appliance in avertical position.
9) Store the appliance in a dry place, free from dust and out of direct sunlight.
10) Never leave the appliance unattended while in use.
11) Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Instructions for use

1) Unroll the cord completely before plugging in.
2) Connect the appliance to the mains.
3) Cut the citrus fruit/s to be squeezed in half.
4) Place the glass at the appliance's juice exit.
5) Turn on the appliance by pushing down on the piece of citrus fruit, once it has been placed on the juicing cone.
6) To stop the appliance, simply stop applying pressure to the cone.
7) Remove both the cone and the filter to empty the jug.
8) Pour juice out of the jug and into glasses to serve directly.
9) If you process a large quantity of fruit, you must periodically clean the filter and remove the remains of the pulp.

Cleaning

- Unplug the appliance from the mains and let it cool before starting any cleaning.
- Except for the power unit and the mains connection, all the parts can be cleaned with detergent and water or in washing up liquid. Rinse thoroughly to remove all traces of detergent.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not submerge the appliance in water or any other liquid, or place it under a running tap.
- It is advisable to clean the appliance regularly and remove any food remains.
- The following parts can be cleaned in the dishwasher: Protective cover, Cone, Filter, Jug

Diagram electric circuit

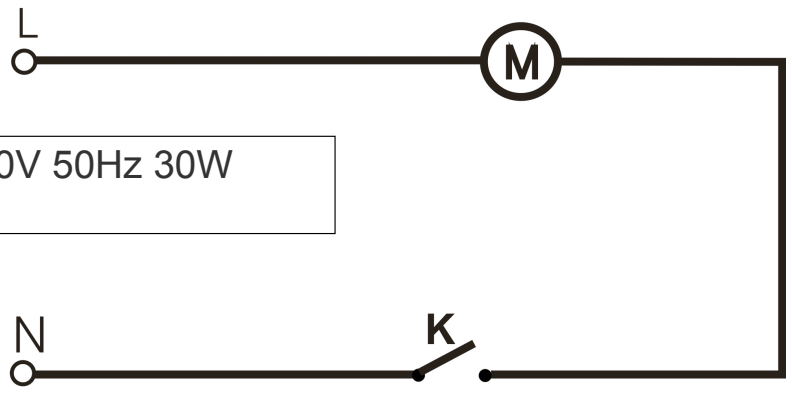

AC220V 50Hz 30W